MIDMARK®

Installation Instructions

9A310xxx Double-Articulating
9A312xxx Triple-Articulating
9A255xxx Non-Articulating
Headrest w/ Adjustment Pad

Required Tools:

3/16 in. allen wrench

Installation:

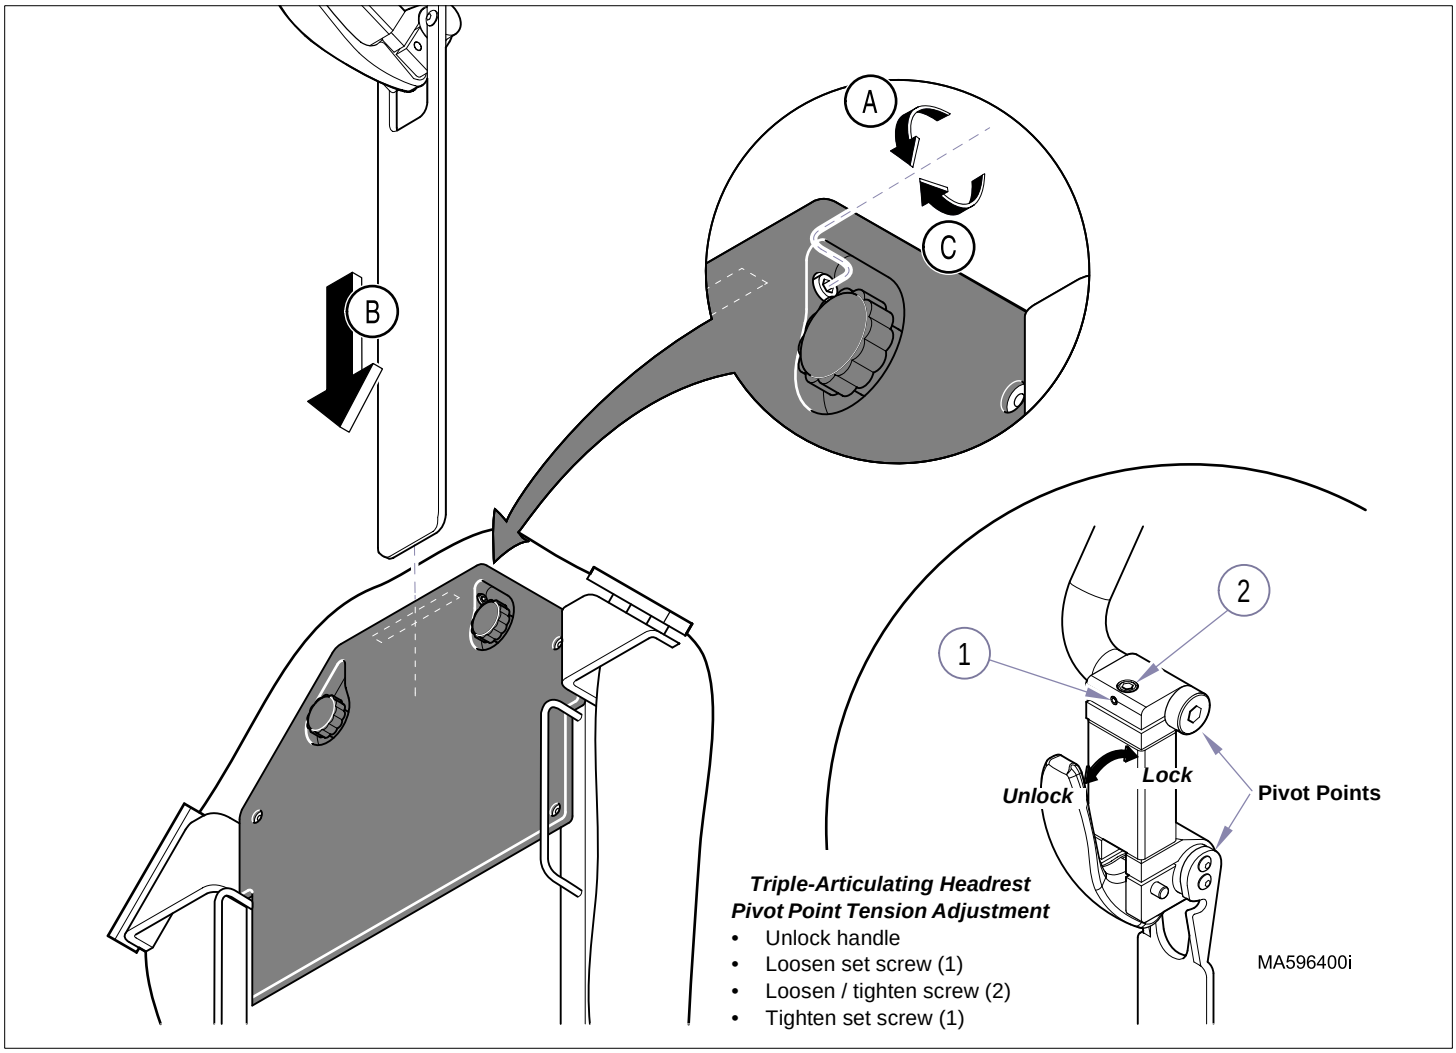

A. Loosen screw & remove old headrest.

B. Insert new headrest into slot.

C. Tighten screw to achieve desired tension.

MIDMARK®

003-1035-00 Rev. C (5/02)

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
© Midmark Corporation - 1999
(937) 526-3662 FAX (937) 526-5542